


INTERCOM UNIT

INTERCOM

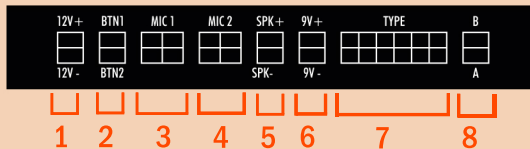

CONNECTIONS

- 1. POWER INPUT:** The device works with 12-24 V. DC supply.
- 2. BUTTON INPUT:** The button is the trigger tip.
- 3. MIC 1:** The first microphone is connected. (Front Microphone)
- 4. MIC2:** The second microphone is connected. (Rear Microphone)
- 5. SPEAKER 1:** The first speaker is connected.
- 6. 9V. ENTRY:** 9V. is output.
- 7. SPEAKER 2 :** The second speaker is connected.
- 8.COMMUNICATION:** It has communication protocol in Ares 485 system.